



Pos	Part Number	Description	Additional Text	Quantity
1	62605007000	EXHAUST MANIFOLD		1.00
2	61105008000	EXHAUST PIPE REAR 07		1.00
3	61005005000	Exhaust gasket 05		2.00
4	61005009000	SPACER BUSH. 8,5X15X7,5 05		2.00
5	51010086100	self-locking nut M8 Cu		5.00
10	61005007049	CLAMP EXHAUST PIPE 05		1.00
11	0025080406	HH COLLAR SCREW M8X40 TX40		1.00
12	0125080003	washer DIN 125 A -8.4		1.00
13	51005067000	INSULATE WASHER 8,5X28X3		1.00
14	58405050065	collar bushing 8.5x12x23.5x10		2.00
15	62505015150	EXHAUST PIPE BRACKET FRONT 07		1.00
16	0025080356	HH collar screw M8x35 TX40		2.00
20	61105051000	EXHAUST CLAMP 52,2MM 07		1.00

21	58405005001	Graphite ring 45X50X25	1.00
29	0019080356	COUNTERSUNK SCREW ISA45 M8X35	2.00
30	61005052000	EXHAUST CLAMP CPL. 05	1.00
31	62505048100	DISTRIBUTOR TUBE 05	1.00
32	0025080306	HH collar screw M8x30	4.00
33	62603061000	Special washer 8X24 ALU H=4.2	4.00
34	62505069000	SPACER BUSH. 8,5X12X18MM 05	2.00
35	54305068100	damp. component silicone grey	5.00
36	0025080166	HH COLLAR SCREW M8X16 TX40	6.00
37	62505047000	THERMAL SHIELD 05	1.00
38*	78105081010	SCREW TORX M5X10	3.00
39	60005005002	EXHAUST GASKET 03	2.00
40	62605182000	EXHAUST SILENCER L/S USA	1.00
41	62605183000	EXHAUST SILENCER R/S USA	1.00
42	54308042000	RUBBER BUFFER	2.00
43	60005095000	CLAMP FOR SILENCER CPL. 03	2.00
44	6000508500001S	SILENCER/HANDLE HOLDER L/S 07	1.00
45	6000508600001S	SILENCER/HANDLE HOLDER R/S 07	1.00
46	0019080306S	COUNTER-SUNK SCREW ISA45 M8X30	2.00
47	0021080003	WASHER DIN9021-A 8,4	1.00
48	0797050000	TOOTH LOCK WASHER DIN6797-J	3.00
49	61041090000	LAMBDA SENSOR 05	2.00
50	62605190060	HEAT PROTECTION CLAMP	2.00
51	54308042000	RUBBER BUFFER	2.00

\* = New part