



Pos	Part Number	Description	Additional Text	Quantity
1	90130000144	ENGINE CASE CPL.		1.00
2	90130022000	VENTILATION CONNECTOR		1.00
3	J625062040	GROOVED BALL BEARING 6204		1.00
4	90130004002	LOCK WASHER F.BEARING DRIVE		1.00
5	J005160123	FLAT HEAD SCREW M6X12 PH		1.00
6	J760122455	SHAFT SEALING RING 12X24X5,5		2.00
7	J472025120	CIRCLIP 25X1,2		1.00
8	90130004003	BALL BEARING 15X35X11		1.00
9	J618131912	NEEDLE ROLLER BEARING HK1312		1.00
10	90130004004	Bearing ball		1.00
11	90130078000	LOCK WASHER		1.00
12	90130078001	FLANGED BOLT 6X12		2.00

13	90130082000	BALL BEARING 63/2/8 HN3CNP	1.00
14	90130079000	LOCK WASHER F.BEARING AGW	1.00
15	J618152114	NEEDLE BEAR. HK1514RS 15X21X14	1.00
16	90130164000	OIL NOZZLE	1.00
17	J625062041	BALL BEARING 6204-Z/HN3	1.00
18	J760253706	SHAFT SEAL RING 25X37X6	1.00
19	J472037150	CIRCLIP 37X1,5	1.00
20	J618131912	NEEDLE ROLLER BEARING HK1312	1.00
21	90130003004	Seal - oil	1.00
22	90130058000	OILJET	1.00
23	90130003007	DOWEL D14	4.00
24	90130047000	CHAIN GUARD	1.00
25	J005060123	FLAT HEAD SCREW M6X12 PH	3.00
26	90130003005	CABLE SUPPORT BELOW	1.00
27	J005050106S	FLAT HEAD SCREW M5X1 SS	5.00
28	90130003006	CABLE SUPPORT ABOVE	1.00
29	J025050163	HH-COLLAR SCREW M5X16 WS8	2.00
30	90111023000	GEAR-POS.SENSOR INL.PULS. COIL	1.00
31	90140020002	BRACKET F. FREE WHEEL GEAR	1.00
32	J028060163	HH-COLLAR SCREW M6X16 WS8	1.00
33	J025060606	HH COLLAR SCREW M6X60 SW10	4.00
34	J025060406	HH COLLAR SCREW M6X40 SW10	10.00
35	90630042000	BREATHER PLATE	1.00
36	J985050103	PAN CROSS SCREW M5X10 PH	3.00
37	90630039000	ENGINE CASE GASKET	1.00