


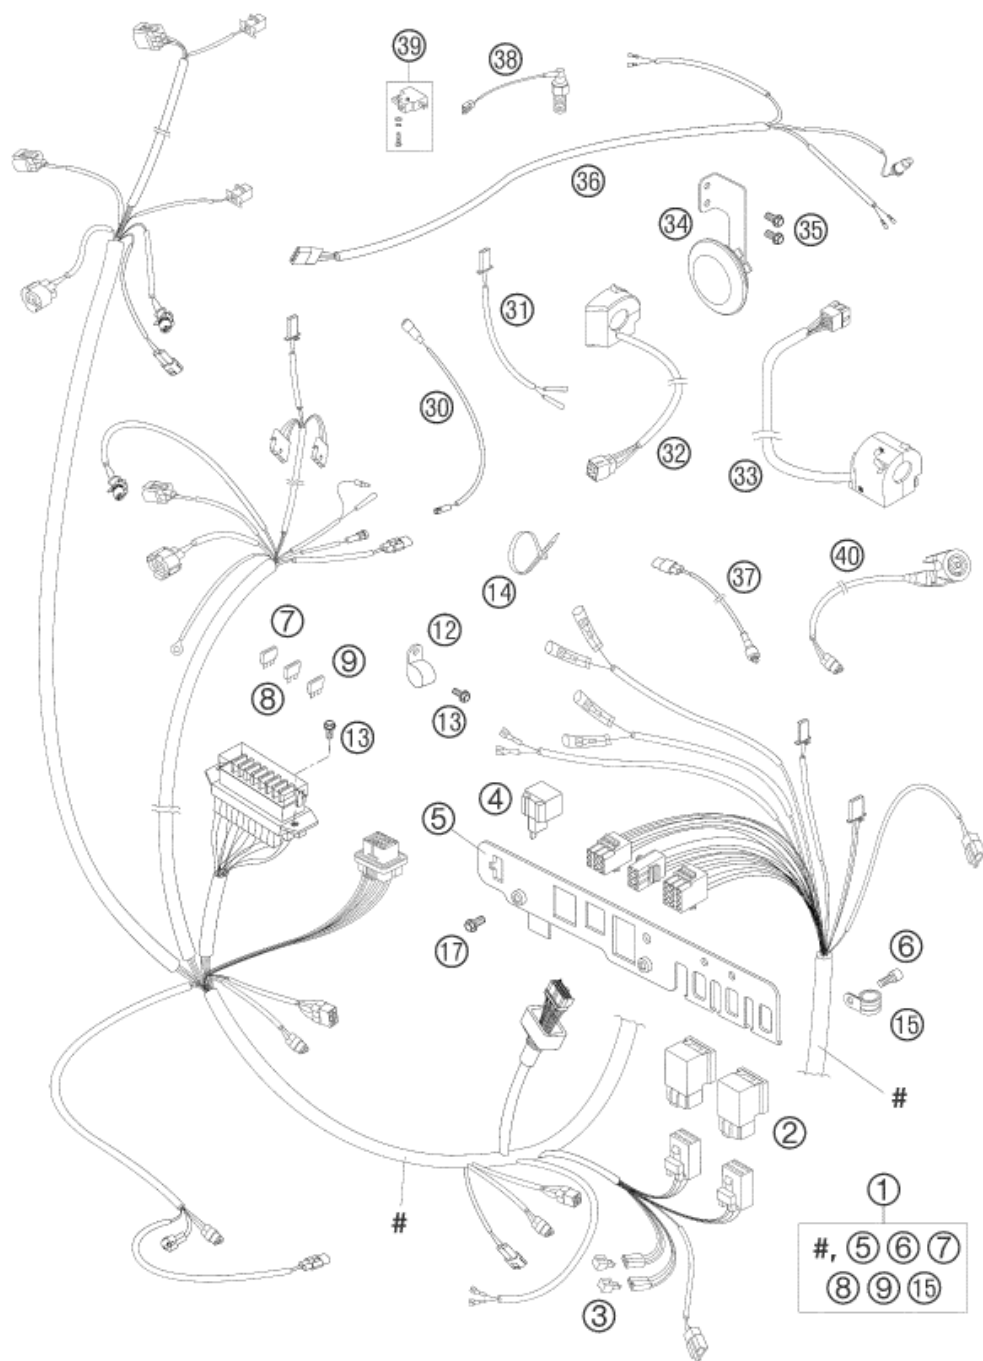

Pos	Part Number	Description	Additional Text	Quantity
1	60011075000	MAIN WIRING HARNESS LC8 ADV.03		1.00
2	58411057000	STARTER RELAY '96		2.00
3	58411096100	DIODE S3H-15 97		2.00
4	44611207200	FLASHER UNIT 97		1.00
5	60011083000	BRACKET FOR PLUGS LC8 ADV. 03		1.00
6	0912050123	AH SCREW DIN0912-M 5X12		1.00
7	58011109105	FUSE 5 A 2003		0.00
8	58011109110	Plug-in fuse, big 10A		0.00
9	58011109115	FUSE 15 A		0.00
12	57013070400	PVC CLAMP 17,4MM HEYCO 3381		1.00
13	0015050123	HH COLLAR SCREW M 5X12 WS=8		3.00

14	44011076100	CABLE TIE 100/2,5MM BLACK		0.00
14	44011076200	CABLE TIE 200/3,6MM BLACK		0.00
14	44011076305	CABLE TIE 300/4,8MM BLACK		0.00
15	49007439000	CLAMP RSGU 15/12		1.00
17	0015060103	HH COLLAR SCREW M 6X10 WS=8	FC	2.00
30	60011092000	OIL-PRESSURE SWITCH CABLE 03		1.00
31	60011025000	FLASHER CABLE FRONT 03		2.00
32	60011074000	START-STOP SWITCH/LIGHT SW. 03	EU/AUS	1.00
32	60011074100	START-STOP SWITCH 03	USA	1.00
33	60011070000	LIGHT SWITCH A.D. 03		1.00
34	60011060000	DC HORN 12V 03		1.00
35	0015060123	HH COLLAR SCREW M 6X12 WS=8		2.00
36	60011076000	WIRING HARNESS REAR LC8 ADV.03		1.00
37	58411049100	CLUTCH SWITCH 03		1.00
38	50311051100	BRAKE LIGHT SWITCH REAR '98	EXC EU+AUS	1.00
39	60011050000	BRAKE LIGHT SW. FRONT CPL. 03		1.00
40	60011045000	SIDE STAND SWITCH 03		1.00