



| Pos | Part Number | Description | Additional Text | Quantity |
|-----|-------------|----------------------------|-----------------|----------|
| 1 | 90211075050 | WIRING HARNESS CPL. | | 1.00 |
| 2 | 90111060100 | HORN 82 DIA | | 1.00 |
| 4 | J025080123 | HH COLLAR SCREW M8X12 SW12 | | 1.00 |
| 5 | 90539010000 | IGNITION UNIT | | 1.00 |
| 6 | 90611057000 | relay (interlock) | | 5.00 |
| 7 | 90141088000 | ROLL OVER SENSOR | | 1.00 |
| 10 | J011050133 | HH COLLAR SCREW M5X13 SW8 | | 2.00 |
| 11 | 90111034000 | VOLTAGE REGULATOR | | 1.00 |
| 12 | 90111134010 | BRACKET REGULATOR MTG | | 1.00 |
| 13 | J025060253 | bolt flanged M6X25 | | 2.00 |
| 15 | 90211097000 | earth wire | | 1.00 |

| | | | | |
|----|-------------|-----------------------------|--|------|
| 16 | 75011088015 | FUSE 15A 07 | | 0.00 |
| 16 | 75011088020 | FUSE MINI 20A | | 0.00 |
| 16 | 75011088030 | FUSE 30A | | 0.00 |
| 16 | 75011088010 | FUSE 10A 07 | | 0.00 |
| 19 | 90611157000 | RELAY (AUX1DIODE) | | 1.00 |
| 20 | 90611053000 | BATTERY 12V/8AH | | 1.00 |
| 21 | 90211197000 | EARTH CABLE | | 1.00 |
| 22 | 90211059000 | CABLE RELAY TO MOTOR | | 1.00 |
| 23 | 90111058000 | STARTER RELAY | | 1.00 |
| 24 | 90111054000 | BRACKET RUBBER FOR BATTERY | | 1.00 |
| 26 | J025060109 | HH-COLLAR SCREW M6X10 SW8 | | 2.00 |
| 27 | 90611054000 | BRACKET BATTERY MTG | | 1.00 |
| 28 | J025060103 | HH COLLAR SCREW M6X10 SW10 | | 1.00 |
| 29 | 90103001051 | HOLDING PLATE FLASHER RELAY | | 1.00 |
| 30 | 90508006004 | SOCKET HEAD BOLT M6X1X8 | | 1.00 |
| 31 | 90511030000 | indicator relay | | 1.00 |
| 32 | 90511021000 | CONTROL UNIT HEAD LIGHT | | 1.00 |