



| Pos | Part Number | Description | Additional Text | Quantity |
|-----|---------------|--------------------------------|-----------------|----------|
| 1 | 58440001000 | E-STARTER ENGINE CPL. LC4-E | | 1.00 |
| 2 | 0770250030 | O-RING 25,00X3,00 NBR 70 | | 1.00 |
| 4 | 0125060003 | WASHER DIN0125-A 6,4 | | 2.00 |
| 5 | 58440090100 | NEEDLE BEARING K30 X 37 X 18 A | | 1.00 |
| 6 | 58440020079 | FREE-WHEEL-GEAR 79-T | | 1.00 |
| 7 | 58440026000 | FREE-WHEEL FWD 332008 BLS | | 1.00 |
| 8 | 58440025000 | FREEWHEEL HUB | | 1.00 |
| 9 | 0912060121 | AH SCREW DIN0912-M 6X12 12.9 | | 4.00 |
| 10 | 58440098000 | AH CENTERING SCREW M6X12,5 | | 2.00 |
| 15 | 5844001010023 | STARTER FLANGE GREY 03 | | 1.00 |
| 16 | 49030090000 | DOWEL 9,8 X 7 X 10 | FS-E | 2.00 |
| 17 | 58540042000 | STARTER FLAN.GASKET 0,5MM 2001 | | 1.00 |
| 20 | 5844001110023 | STARTER COVER GREY 03 | | 1.00 |
| 21 | 58440011050 | FORM RING F.STARTERCOVER NBR70 | | 1.00 |
| 22 | 58440022000 | INTERMEDIATE GEAR 52-T | | 1.00 |
| 23 | 58440090000 | needle roller and cage K 10x13 | | 3.00 |
| 24 | 58440021018 | REDUCTION GEAR 55-T/18-Z | | 1.00 |
| 25 | 58440028000 | BEARING BOLT 10 X 38,4 | | 1.00 |
| 26 | 58440029000 | BEARING BOLT 10 X 54 | | 1.00 |

| | | | | |
|----|------------|--------------------------------|-------------------|------|
| 27 | 0402040780 | NEEDLEROLL. DIN5402 NRB 4X 7,8 | | 2.00 |
| 30 | 0015060163 | HH COLLAR SCREW M 6X16 WS=8 | FE, FS | 1.00 |
| 31 | 0015060203 | HH COLLAR SCREW M 6X20 WS=8 | | 1.00 |
| 32 | 0015060253 | HH COLLAR SCREW M 6X25 WS=8 | | 3.00 |
| 33 | 0015060303 | HH COLLAR SCREW M 6X30 SW=8 | LC4, LC4 SM, DUKE | 1.00 |
| 36 | 0015060453 | HH COLLAR SCREW M 6X45 WS=8 | 525 SMR | 1.00 |
| 37 | 0015060503 | HH COLLAR SCREW M 6X50 WS=8 | | 1.00 |
| 45 | 0015060803 | HH COLLAR SCREW M 6X80 WS=8 | | 1.00 |
| 48 | 0015060953 | HH COLLAR SCREW M 6X95 WS=8 | | 1.00 |