



Pos	Part Number	Description	Additional Text	Quantity
1*	6010302310030	SIDE STAND L=302MM 06		1.00
3*	62503027100	SCREW F. SIDE STAND M10X31,2		1.00
4*	61003028001	SCREW SIDE STAND SPRING 05		1.00
6*	61003024000	SPRING L=116 MM 05		1.00
7	60003026000	SIDE STAND BRACKET 03		1.00
8	0015100303	HH COLLAR SCREW M10X30 WS=13		2.00
9*	60103028000	SIDE STAND PICKUP 06		1.00
10	0015100243	HH COLLAR SCREW M10X24 WS=13		2.00
11*	61011045000	Side stand sensor		1.00
12*	60103029000	SUPPORT F.SIDE STAND SWITCH 06		1.00
13*	0084040123	CYL.HEAD SCREW DIN84A M4x12		2.00
14*	0985040003	SELF LOCKING NUT DIN0985-M 4		2.00
15*	60103029050	MAGNET HOLDER ADV. 06		1.00
16*	0015060123	HH COLLAR SCREW M 6X12 WS=8		1.00

22*	6000302240030	CENTER STAND L=333MM 05		1.00
23	60003030000	SPRING FOR CENTER STAND 03		2.00
24	60003022115	SPRING TENSIONER 03		1.00
25	0125080003	washer DIN 125 A -8.4		1.00
26	0015080303	HH COLLAR SCREW M 8X30 WS=10		1.00
27	56503093000	SPECIAL SCREW M10X55 WS=17		2.00
28	0125100003	washer DIN 125 A 10.5	ONLY FOR 640 DUKE	2.00
29	60003022020	BEARING BUSH CENTER STAND 03		2.00
30	60003022021	SPACER 10X16X38 MM 03		2.00

* = New part