

11	59029026006	LIMIT PLUG GAUGE F.VALVE GUIDE		1.00
12	59029041000	FEELER GAUGE SET10,12,15,20,25		1.00
13	6899785	LOCTITE 243 BLUE 5 ML		0.00
14	60029002000	ENGINE BRACKET FOR LC8 03		0.00
15	60029003000	BRACKET FOR CLUTCH		1.00
16	60029005000	MOUNT.SLEEVE F. SH. SEAL RING		1.00
17*	60029006000	ADAPTOR F.OIL PRESSURE GAUGE		1.00
18	60029009000	FLYWHEEL EXTRACTOR		1.00
19*	60029009010	PUSH SCREW F. FLYWH. EXTRACTOR		1.00
19	60029009110	PUSH SCREW F. FLYWH. EXTRACTOR	M16X1,5	1.00
20	60029010000	DEGREE DISK 360DEG - 1/2 INCH		1.00
21	60029011000	SYNCHRONIZER CPL. 2-CYLINDER		1.00
22	60029012000	PLASTIGAUGE - MEASURING STRIP		1.00
23	60029015000	PISTON RING COMPRESSOR CPL. 03		1.00
24*	60029016000	SETTING GAGE F. FLOAT LEVEL		1.00
25	60029018000	INTERN.BEAR.PULLER 28 MM		1.00
26	60029031000	PRESSURE PUNCH F. CRANKSHAFT		1.00
27	60029033000	EXTRACTOR PRIM. GEAR		1.00
28	60029041000	INSERT FOR VALVE SPRING LEVER		1.00
29	60029043010	SEAL.RING PRESS PUNCH PUSH ROD		1.00
30	60029043020	SEAL.RING PRESS PUNCH COUNT.SH		1.00
31	60029043030	PRESS PUNCH SEAL.RING/BEARING		1.00
32	60029043040	SEAL.RING PRESS PUNCH WAT.PUMP		1.00
33	60029043060	PRESS PUNCH WAPU-BEARING		1.00
33	60029043050	SEAL.RING PRESS PUNCH BA.SHAFT		1.00
34	60029044050	PRESS TOOL FOR MAIN BEARING		1.00
35	60029046028	PRESS TOOL F. SUPPORT BEARING		1.00
36	60029050000	BOTTOM PART PRETENSIONING TOOL		1.00
37	60029051000	HOOK WRENCH PRETENS.TOOL CPL.		1.00
38*	60029058000	SCISSOR GEAR PULLER		1.00
39	60029073000	SPARK PLUG WRENCH 16MM 1/2INCH		1.00
40	60029075000	SPECIAL SOCKET F.CYL.-HEAD NUT		1.00
41	60029081000	WRENCH FOR CYLINDER-HEAD SCREW		1.00
42	60029082000	HOLDER FOR WATER PUMP WHEEL		1.00
43	60029083000	SPECIAL SOCKET F. CYLINDER NUT		1.00
44*	61029094000	EFI PRESSURE TESTER		1.00
45*	62529093000	IGNITIONWIRE ADAPTOR		1.00

* = New part