


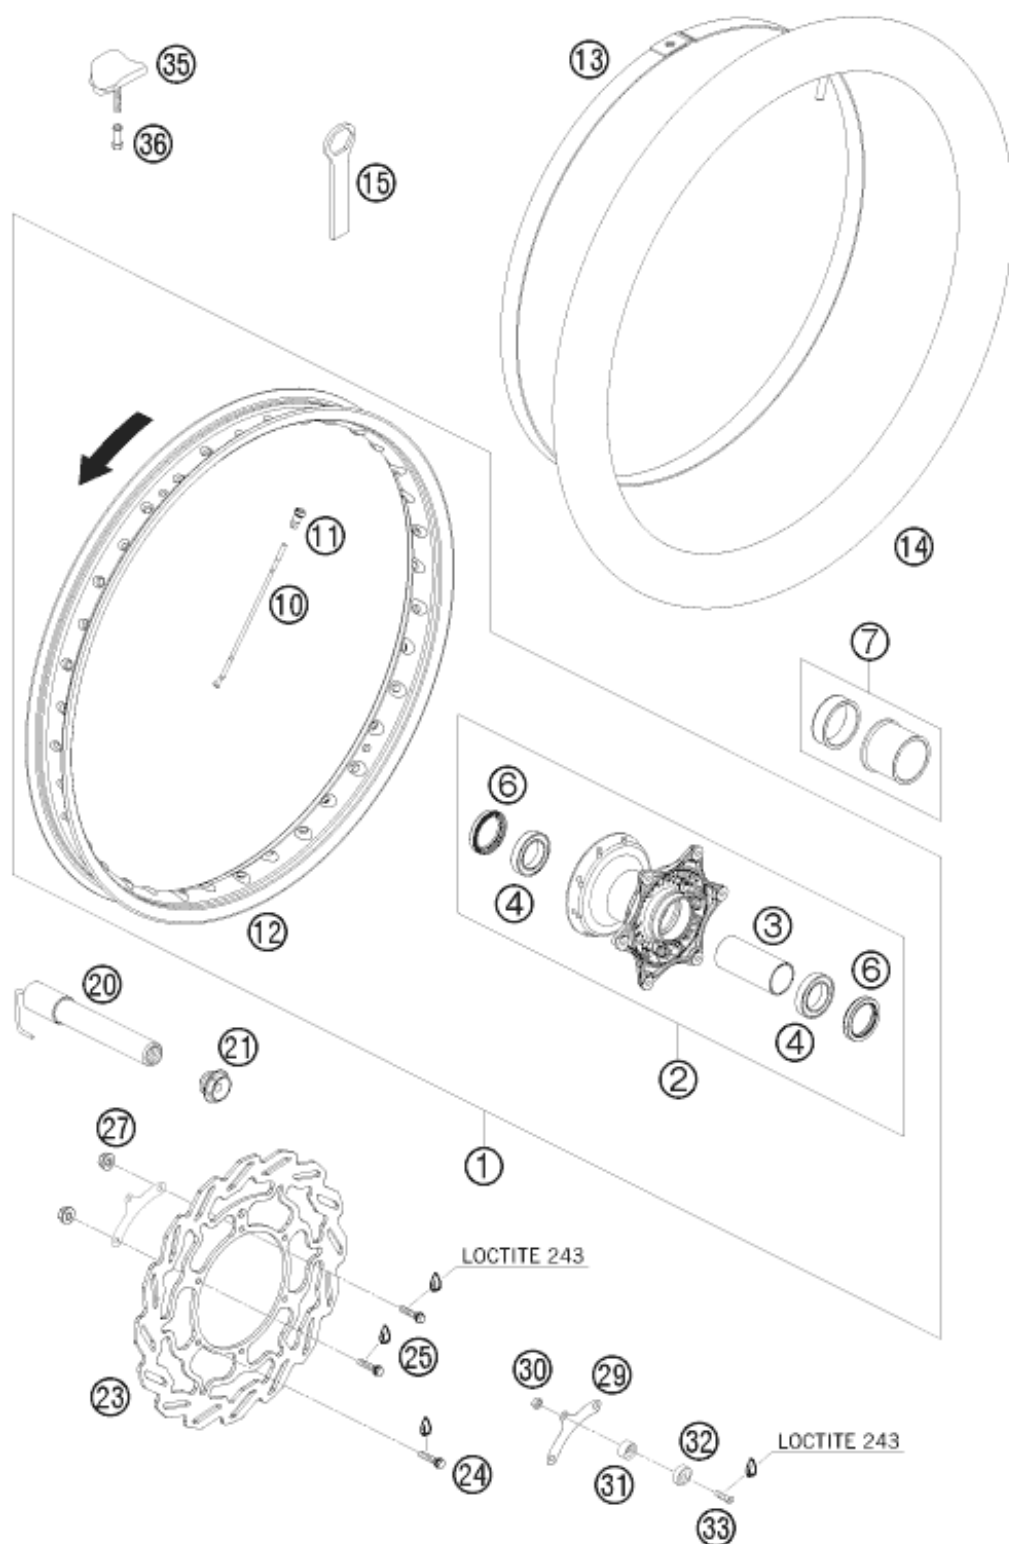

Pos	Part Number	Description	Additional Text	Quantity
1	7730900104430	FRONT WHEEL CPL.1,6X21EXL		1.00
2	78009010044	FRONT WHEEL HUB CPL. 08		1.00
3	54809011000	BEA.SPACERTUBE 35X2 L=79,4 03		1.00
4	0625069068	Grooved ball bearing 6906		2.00
6	0760354771	Radial shaft seal 35X47X7 TC		2.00
7	76209013044	SPACER BUSHING FRO. WHEEL 30MM		1.00
10	78009074226	SPOKE M4,5X226-21" 08		36.00
11	50309072100	SPOKE NIPPLE M4,5X0,75 8X21		36.00

12	5460907010030	FRONTRIM 1,60X21"EXCELAL4 BLK		1.00
13	50309073000	Tube protector 21"		1.00
14	50309075000	Hose 21"		1.00
15	76212060032	RING WRENCH 32MM		1.00
20	58509081100	FRONT AXLE D=30MM 04		1.00
21	76209082000	COLLAR SCREW FRONT AXLE WS32		1.00
23	58509060000	BRAKE DISC FRONT 07		1.00
24	0015060163	HH COLLAR SCREW M 6X16 WS=8	FE, FS	4.00
25	0015060203	HH COLLAR SCREW M 6X20 WS=8		2.00
27	56509064100	Self locking nut M6 - 10		2.00
29	58214050050	BRACKET SENSOR MAGNET ADV. '97		1.00
30	0985040003	SELF LOCKING NUT DIN0985-M 4		1.00
31	58303063000	BRAKE LEVER STOP '93		1.00
32	58314069050	MAGNET LOOSE '97		1.00
33	0966040203	OVAL HEAD SCREW DIN966 M4X20		1.00
35	51009100100	RIM LOCK VM1 (1,60")	ONLY FOR 19" WHEEL	0.00
36	50310090050	NUT FOR WHEEL HOLDER '96		0.00