


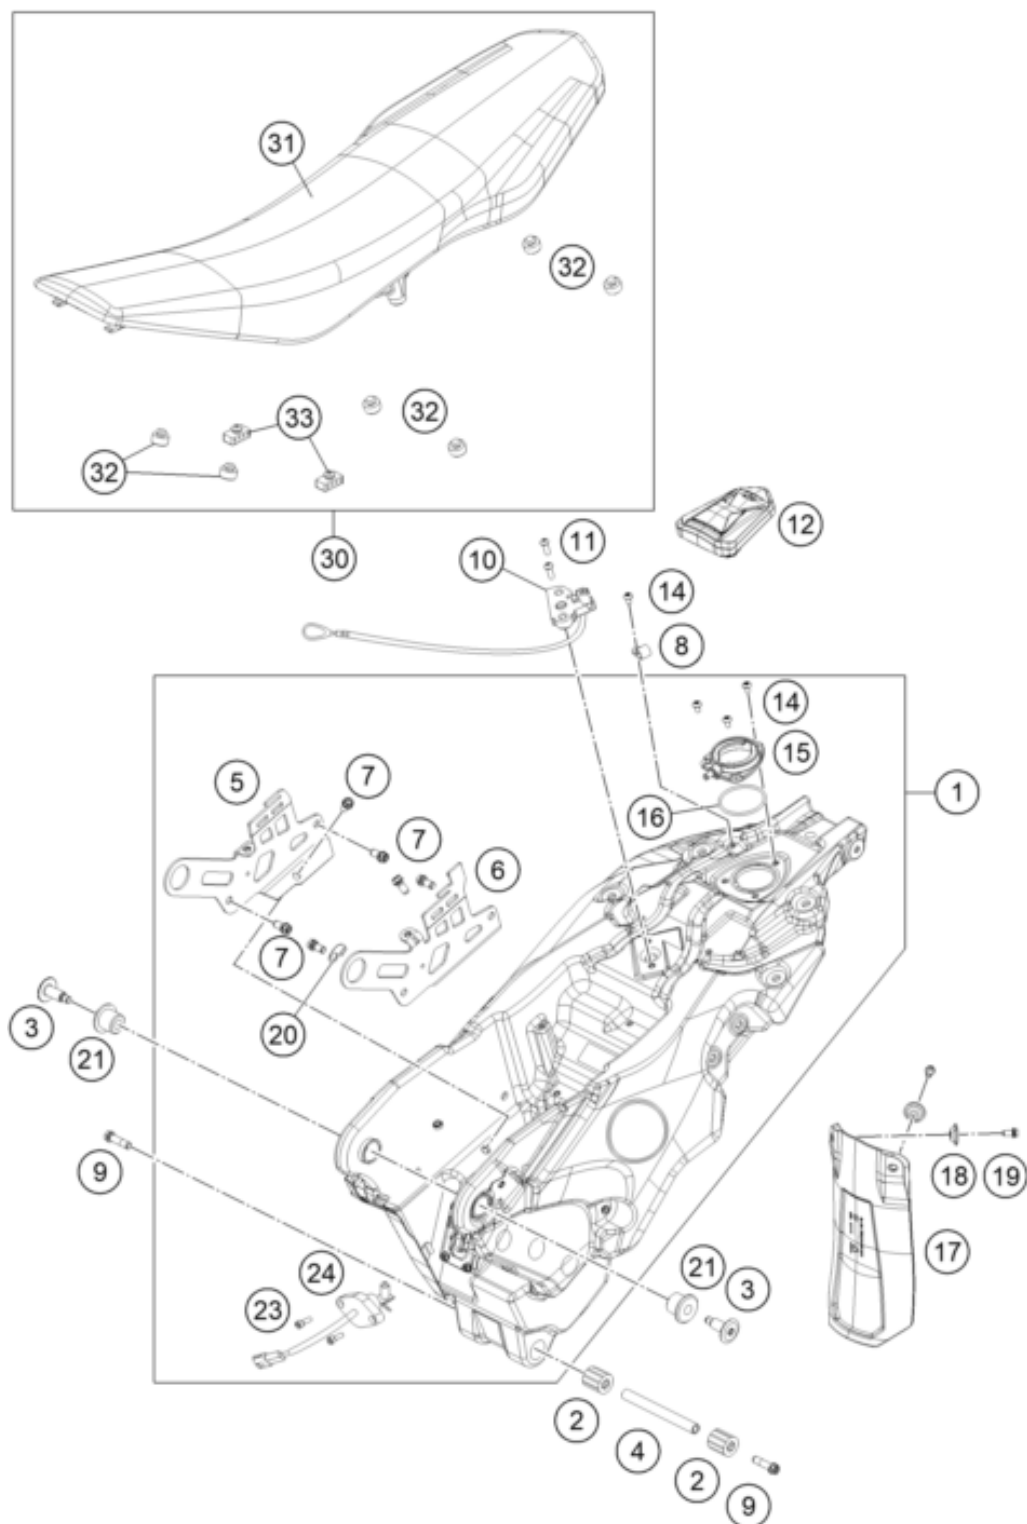

Pos	Part Number	Description	Additional Text	Quantity
1	76907013044	Fuel tank cpl.		1.00
2	76507065100	RUBBER BUSHING 11,7X24,7 L=26		2.00
3	76507060000	BEARING BUSHING UP		2.00
4	76507061000	BEARING BUSHING DOWN		1.00
5*	27007028000	RIGHT FUEL-TANK SUPPORT PLATE		1.00
6*	27007027100	Retaining bracket tank left		1.00
7	0025080166	HH COLLAR SCREW M8X16 TX40		6.00
8*	57013070000	PVC-CLAMP 7/16" HEYCO 3377		1.00
9	0025080306S	HH COLLAR SCREW M8X30 TX40		2.00

10	76507050000	SEAT LOCK		1.00
11	0738060181	BHCS ISO 7380 M6X18		2.00
12*	76907008000	Fuel tank cap		1.00
14*	58605083010	SCREW TORX M5X10 05		4.00
15	76507108050	Closure flange		1.00
16	0770050030	O-ring 50.00X3.00 VITON		1.00
17	76506010100	Splash protection		1.00
18	72210079000	BUCKET		2.00
19	0025060106	HH collar screw M6x10 TX30		2.00
20*	27007053000	CLAMP FOR SEAT LOCK LINKAGE		1.00
21	76507066000	RUBB.BEAR.BOX 12x24x35 L=24,5		2.00
23	0912050163	AH collar screw DIN 912 M5x16		2.00
24	58207080100	GAS-LEVEL SENSOR ADV. 2006		1.00
30*	76907140000	Seat SMC-R cmpl.		1.00
31*	76907140050	Seat cover		1.00
32*	76907040045	Seat rubber		6.00
33*	28503002010	Rubber support		2.00

* = New part