



| Pos | Part Number | Description | Additional Text | Quantity |
|-----|---------------|--------------------------------|----------------------|----------|
| 1 | 6010302320030 | SIDE STAND L=349MM 07 | | 1.00 |
| 3 | 62503027100 | SCREW F. SIDE STAND M10X31,2 | | 1.00 |
| 4 | 61003028001 | SCREW SIDE STAND SPRING 05 | | 1.00 |
| 6 | 61003024000 | SPRING L=116 MM 05 | | 1.00 |
| 7 | 60003026000 | SIDE STAND BRACKET 03 | | 1.00 |
| 8* | 0035100309S | AH collar screw M10x30 ISA45 | ONLY FOR ADVENTURE R | 2.00 |
| 9 | 60103028000 | SIDE STAND PICKUP 06 | | 1.00 |
| 10* | 0035100249 | AH collar screw M10x24 ISA45 | | 2.00 |
| 11 | 61011045000 | Side stand sensor | | 1.00 |
| 12 | 60103029000 | SUPPORT F.SIDE STAND SWITCH 06 | | 1.00 |
| 13 | 0084040123 | CYL.HEAD SCREW DIN84A M4x12 | | 2.00 |
| 14 | 0985040003 | SELF LOCKING NUT DIN0985-M 4 | | 2.00 |

| | | | | |
|-----|---------------|------------------------------|-------------------|------|
| 15 | 60103029050 | MAGNET HOLDER ADV. 06 | | 1.00 |
| 16* | 0025060126 | HH collar screw M6x12 TX30 | | 1.00 |
| 22 | 6000302200030 | CENTER STAND L=379MM 04 | | 1.00 |
| 23 | 60003030000 | SPRING FOR CENTER STAND 03 | | 2.00 |
| 24 | 60003022115 | SPRING TENSIONER 03 | | 1.00 |
| 25 | 0125080003 | washer DIN 125 A -8.4 | | 1.00 |
| 26* | 0025080306 | HH collar screw M8x30 | | 1.00 |
| 27 | 56503093000 | SPECIAL SCREW M10X55 WS=17 | | 2.00 |
| 28 | 0125100003 | washer DIN 125 A 10.5 | ONLY FOR 640 DUKE | 2.00 |
| 29 | 60003022020 | BEARING BUSH CENTER STAND 03 | | 2.00 |
| 30 | 60003022021 | SPACER 10X16X38 MM 03 | | 2.00 |

* = New part