
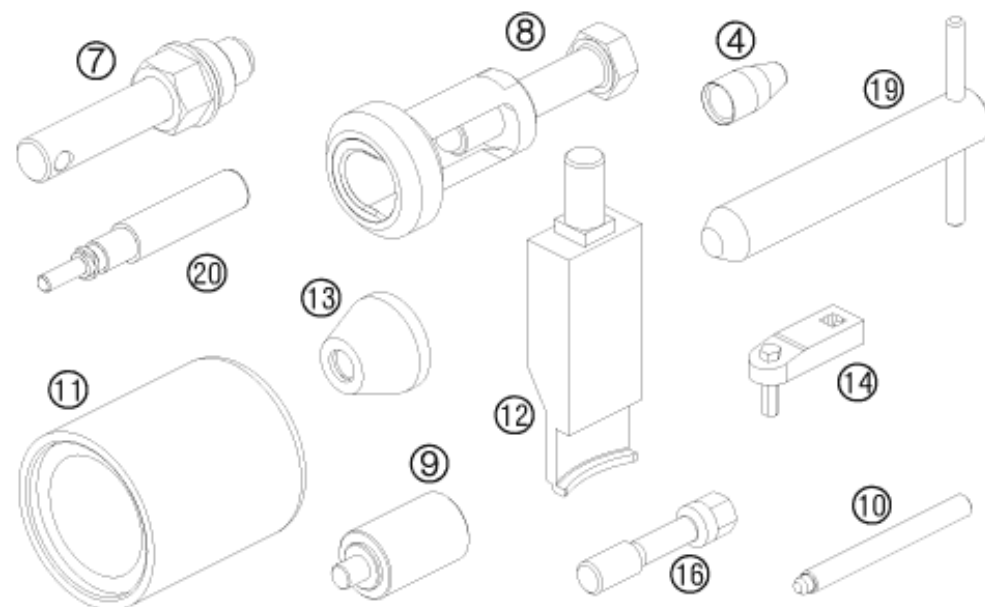


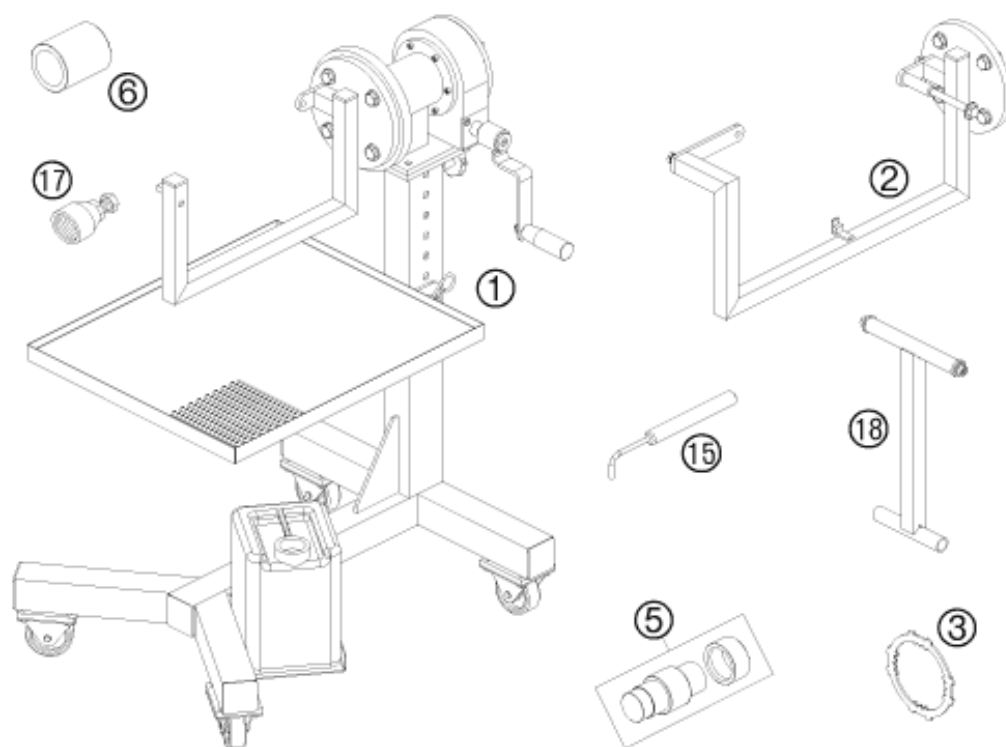

| Pos | Part Number | Description                    | Additional Text | Quantity |
|-----|-------------|--------------------------------|-----------------|----------|
| 1   | 61229001000 | UNIVERSAL MOUNTING RACK        |                 | 1.00     |
| 2   | 61229002000 | ENGINE BRACKET                 |                 | 1.00     |
| 3   | 61229003000 | CLUTCH HOLDER                  |                 | 1.00     |
| 4   | 61229005000 | MOUNT. SLEEVE SHAFT SEAL RING  |                 | 1.00     |
| 5   | 61229044000 | PRESSING TOOL D53 MAIN BEARING |                 | 1.00     |
| 6   | 61229045000 | BEARING RING F. PRESSING TOOL  |                 | 1.00     |
| 7   | 61229010000 | PULLER CPL. F. IGNITION COVER  |                 | 1.00     |
| 8   | 61229020000 | RING F. COMB. SHAFT BEARING    |                 | 1.00     |
| 9   | 61229013000 | ARBOR PRESS SS-RING DRIVE      |                 | 1.00     |
| 10  | 61229015000 | ENGINE BLOCKING SCREW          |                 | 1.00     |

|    |             |                                |  |      |
|----|-------------|--------------------------------|--|------|
| 11 | 61229016000 | PRES.SOCKET COUNTERSHAFT DRIVE |  | 1.00 |
| 12 | 61229017000 | PULLER F. COUNTERSHAFT DRIVE   |  | 1.00 |
| 13 | 61229018000 | COMBINATION PRESSURE PAD       |  | 1.00 |
| 14 | 61229025000 | EXTENSION TORQUE WRENCH        |  | 1.00 |
| 15 | 61229021000 | UNLOCKING TOOL                 |  | 1.00 |
| 16 | 61229008000 | PRES.PEACE F.ROTOR EXTRACTOR   |  | 1.00 |
| 17 | 58429009000 | MAGNETO EXTRACTOR              |  | 1.00 |
| 18 | 61229050000 | FRAME SUPPORT                  |  | 1.00 |
| 19 | 61229051000 | CENTERING PIN                  |  | 1.00 |
| 20 | 75029035000 | PLUG IN FUSE PISTON PIN        |  | 1.00 |