




LC4 ENDURO		A606.03.098.000	
<b>Fuel:</b>	RON 95 unleaded (USA = PREMIUM PON 91)		
<b>Tyre front:</b>	90/90-21 54TLM+5		
<b>Air pressure front:</b>	rider only	1,8 bar (26 psi)	
	terrain	1,5 bar (22psi)	
	max. payload	2,2 bar (32 psi)	
<b>Tyre rear:</b>	140/80-18 70R TLM+5		
<b>Air pressure rear:</b>	rider only	1,8bar (26 psi)	
	terrain	1,5 bar (22psi)	
	max. payload	2,2 bar (32 psi)	
<b>Max payload:</b>	188 kg (414 lbs)		
<b>Max. total weight:</b>	350 kg (772 lbs)		
<b>Engine oil:</b>	fully synthetic 10W50		
<b>Further information see owner's manual</b>			

SETTING <small>look owner's manual</small>	LC4 ENDURO <small>A606.01.098.000</small>		FORK		SHOCK	
	Compression (clicks)	Rebound (clicks)	Compr. low speed (clicks)	Compr. high speed (clicks)	Rebound	Spring preload (mm)
Comfort	20	20	20	2	20	18
<b>Standard</b>	<b>15</b>	<b>15</b>	<b>15</b>	<b>1,5</b>	<b>15</b>	<b>18</b>
Sport	10	10	10	1	10	18
Max. payload	10	10	10	1	10	25

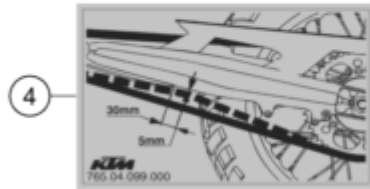

SPARE 25A	FUSE 25A	ABS control unit
SPARE 10A	FUSE 10A	ABS control unit
SPARE 10A	FUSE 9 - 10A	ABS wakeup, dashboard wakeup, bCCU wakeup, 6D sensor, ORB
SPARE 15A	FUSE 8 - 15A	ACC2, USB-charging, HCU
SPARE 10A	FUSE 7 - 10A	ACC1
SPARE 10A	FUSE 6 - 10A	High beam, low beam, position-, tail-, licence light
SPARE 10A	FUSE 5 - 10A	Horn, brake light
SPARE 10A	FUSE 4 - 10A	radiator fans
SPARE 10A	FUSE 3 - 10A	fuel pump
SPARE 10A	FUSE 2 - 10A	Ignition, ECU, EWAR, fuel injection, A sensor
SPARE 10A	FUSE 1 - 10A	Ignition, dashboard, bCCU
SPARE 30A		
	FUSE - 30A	main fuse
A606.11.087.010		

Pos	Part Number	Description	Additional Text	Quantity
1	A60007098000	Fuel tank sticker EU		1.00
2	63003596000	LABEL M+S V-LIMIT 07		1.00
3	A60601098000	Decal std setting LC4 ENDURO		1.00
4	76504099000	Sticker "Kettenspannung"		1.00
5	A60603095000	Sticker ECE		1.00
6	A60603098000	Decal technical information End		1.00
7	21003094000	Sticker "EAC"		1.00
8	A60611087010	Decal fuse box		1.00