



| Pos | Part Number | Description | Additional Text | Quantity |
|-----|---------------|--------------------------------|-----------------|----------|
| 1 | 93111175000 | HARNESS WIRING | | 1.00 |
| 2 | 93011060100 | Horn | | 1.00 |
| 3 | J025080123 | HH COLLAR SCREW M8X12 SW12 | | 1.00 |
| 4 | 93541088000 | rollover sensor | | 1.00 |
| 5 | J025060169 | HH COLLAR SCREW M6X16 SW8 | | 2.00 |
| 6 | 94111071000 | LOCATOR SWITCH | | 1.00 |
| 7 | 93311058000 | Rubber damper starter relay | | 1.00 |
| 8 | 90511030000 | indicator relay | | 1.00 |
| 9 | 28111034000 | Voltage regulator | | 1.00 |
| 10 | J900000602600 | BOLT FLANGED-M6X1XL26XCL 10.9X | | 2.00 |
| 11 | 93041080050 | Cable | | 1.00 |
| 12 | 93011059000 | Starter cable 6MM | | 1.00 |
| 13 | 93011197000 | Ground wire | | 1.00 |

| | | | | |
|----|-------------|--------------------------------|--|------|
| 14 | 93011058000 | Starter relais | | 1.00 |
| 15 | 93011055060 | Band batterie | | 1.00 |
| 16 | 93011055000 | Battery rubber holder | | 1.00 |
| 17 | 93011054000 | BOX BATTERY | | 1.00 |
| 18 | 93008018060 | Cross brace cover | | 1.00 |
| 19 | 90611053000 | BATTERY 12V/8AH | | 1.00 |
| 20 | 75011088010 | FUSE 10A 07 | | 8.00 |
| 21 | 75011088015 | FUSE 15A 07 | | 3.00 |
| 22 | 75011088030 | FUSE 30A | | 2.00 |
| 23 | J005050123 | FLAT HEAD SCREW M5X12 PH | | 3.00 |
| 24 | 90108050001 | CLIP NUT M5 | | 3.00 |
| 25 | 96338091000 | cable switch pressure oil | | 1.00 |
| 26 | 93011056100 | Bracket battery band | | 1.00 |
| 27 | 90611057000 | relay (interlock) | | 4.00 |
| 28 | 93011026000 | protector | | 1.00 |
| 29 | 93511084000 | PIGTAIL PH-3 FUEL PUMP | | 1.00 |
| 30 | 93008078000 | Rubber grommet | | 2.00 |
| 31 | 93042033000 | Cable earth ABS | | 1.00 |
| 32 | J025060122 | Hex collar screw M6X12 | | 2.00 |
| 33 | 90107088050 | WASHER 5,2X14X2MM | | 1.00 |
| 34 | J912050166 | bolt socket-M5X0.8XL16XCL8.8XB | | 1.00 |
| 35 | 28111096000 | Transil unit | | 1.00 |