


SETTING <small>(last owner's preference)</small>	FORK			SHOCK		
	Compression (click)	Rebound (click)	Clamp, low speed (click)	Clamp, high speed (click)	Rebound	Spring preload (mm)
Comfort	20	20	20	2	20	18
Standard	15	15	15	1,5	15	18
Sport	10	10	10	1	10	18
Max. payload	10	10	10	1	10	25

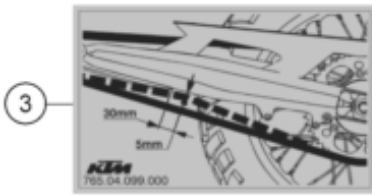

SPARE 25A	FUSE 25A	ABS control unit
SPARE 16A	FUSE 16A	ABS control unit
SPARE 10A	FUSE 9 - 10A	ABS wakeup, dashboard wakeup, bCCU wakeup, 6D sensor, OBD
SPARE 15A	FUSE 8 - 15A	ACC2, USB-charging, HCU
SPARE 10A	FUSE 7 - 10A	ACC1
SPARE 10A	FUSE 6 - 10A	High beam, low beam, position, tail, license light
SPARE 10A	FUSE 5 - 10A	Horn, brake light
SPARE 10A	FUSE 4 - 10A	radiator fans
SPARE 10A	FUSE 3 - 10A	fuel pump
SPARE 10A	FUSE 2 - 10A	Ignition, ECU, EWP, fuel injection, lambda sensor
SPARE 10A	FUSE 1 - 10A	Ignition, dashboard, bCCU
SPARE 30A		
	FUSE - 30A	main fuse

A606.11.087.010

Pos	Part Number	Description	Additional Text	Quantity
1	A60007098100	Fuel tank sticker NA		1.00
2	A60601098000	Decal std setting LC4 ENDURO		1.00
3	76504099000	Sticker "Kettenspannung"		1.00
4	A60611087010	Decal fuse box		1.00
5	LI25-A606-30A			1.00
6	LI26-A606-13A			1.00
7	LI26-A606-6A			1.00