



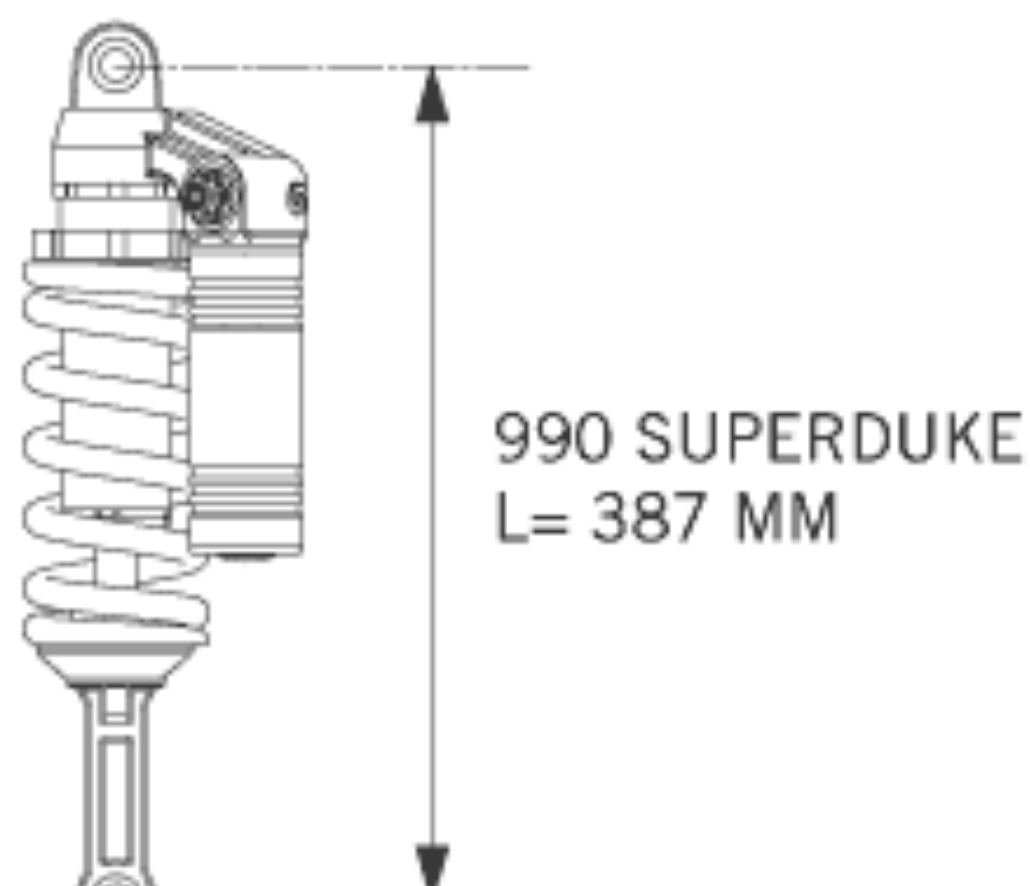

990 SUPERDUKE BLACK 2005 <2005><AU, GB><9822E7>  
SHOCK ABSORBER  
25683

---

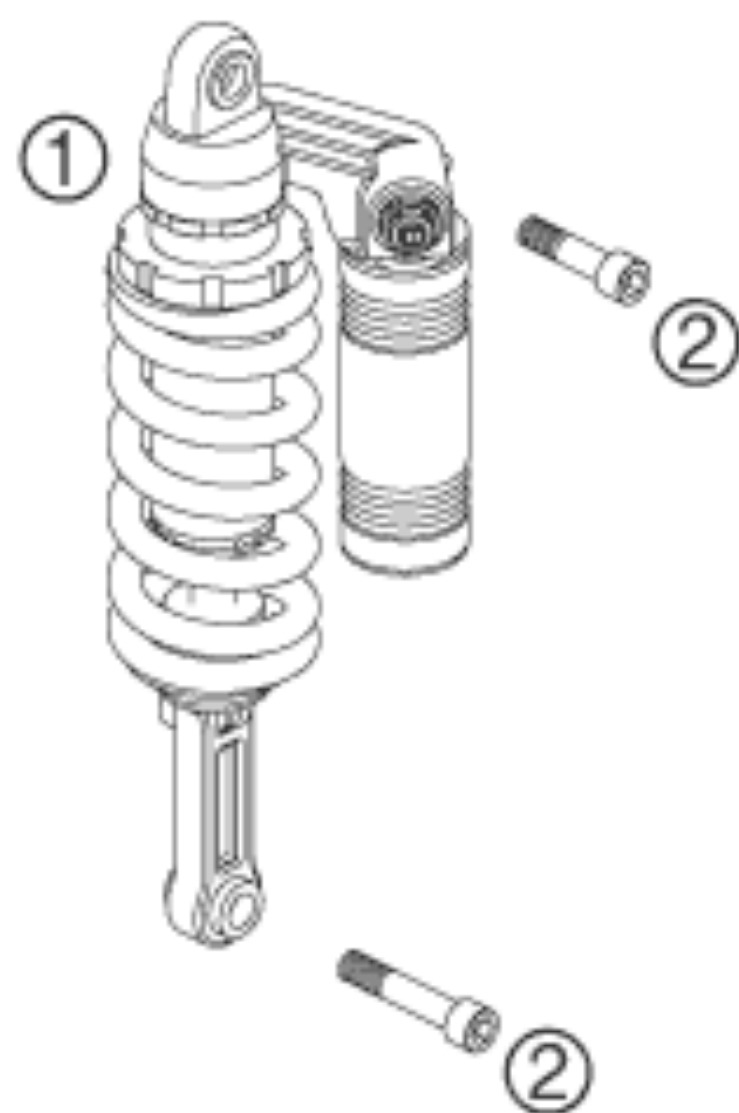

<b>Pos</b>	<b>Part Number</b>	<b>Description</b>	<b>Additional Text</b>	<b>Quantity</b>
2	60004016000	SCREW M14X1,5 L=55MM 03		1.00
2	60004017000	SCREW M14X1,5 L=73MM 03		1.00