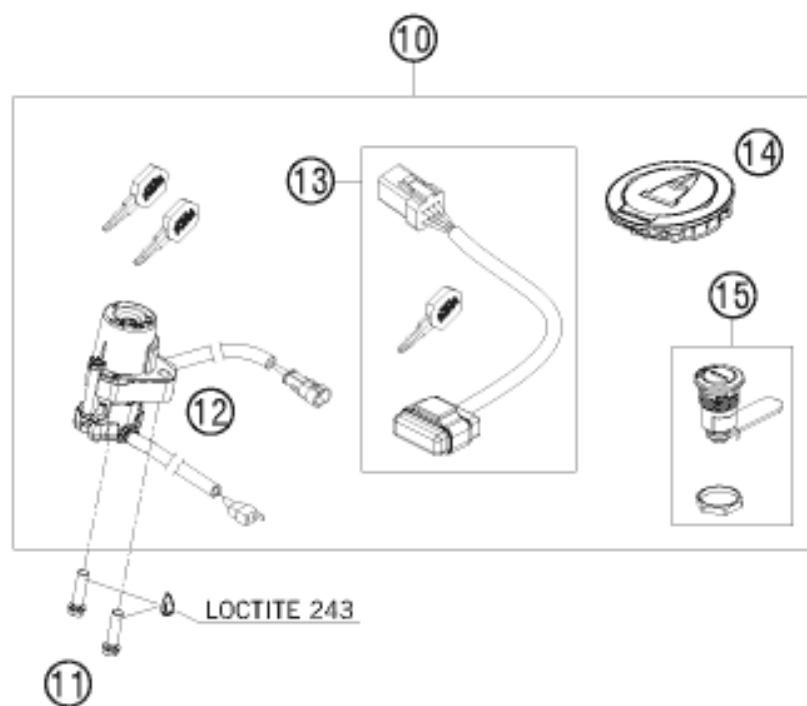
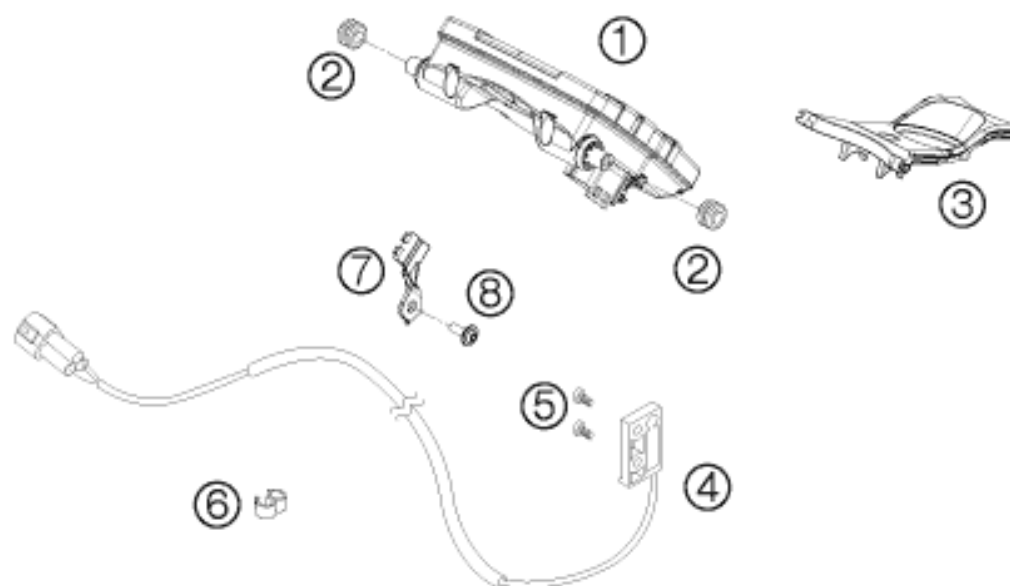



ACHTUNG !!!

Zum Anlernen des
EWS-Steuergeräts
sind ein roter und
mindestens ein schwarzer
Zündschlüssel erforderlich.


CAUTION !!!

To program the
ICU control unit,
one red and at least one
black ignition keys
are required.

Pos	Part Number	Description	Additional Text	Quantity
-----	-------------	-------------	-----------------	----------

1	69014069200	SPEEDOMETER		1.00
2	69014078000	RUBBER SLEEVE 10X14X20 08		2.00
3	69014012000	COVER IGNITION LOCK 08		1.00
4	61014068100	SPEEDOMETER SENSOR 10		1.00
5	0084040083	CYL.HEAD SCREW DIN0084-M 4X8 A		2.00
6	60111094000	CLIP 5/7 MM 06		3.00
7	69101085000	SPEEDOMETER CABEL FIXING RC8		1.00
8	69014017000	SPECIAL SCREW M6X18 ISA30 08		1.00
10*	69011066244	LOCK SET RC8		1.00
11*	0025080306S	HH COLLAR SCREW M8X30 TX40		2.00
12	69011066100	STARTER LOCK RACELOCK W. ANT.		1.00
13	69011021000	IMMOBILIZER WITH MASTERKEY		1.00
14*	69007008100	TANK CAP		1.00
15	69007050000	SEAT LOCK		1.00
16	60411067000	KTM ignition key		1.00

* = New part